

Fig. 134. - Wiring diagram.

1. Front direction signal lights.
2. Front parking lights.
3. Low beam headlights (with halogen bulb).
4. High beam headlights (with halogen bulb).
5. Town tone horn.
6. Engine cooling fan motor.
7. Alternator.
8. Spark plugs.
9. Ignition distributor.
10. Thermal switch for motor 6.
11. Side direction signal lights.
12. Low oil pressure indicator sending unit.
13. Pressure switch for electric fuel pump 82.
14. Relay switch for motor 6.
15. Water temperature gauge thermal switch: shifts gauge pointer to red end of scale (dangerous water temperature) irrespective of impulses from sender 23.
16. Ignition coil.
17. Engine compartment lights.
18. Electro-pneumatic horn compressor.
19. Electro-pneumatic horn relay switch.
20. Oil temperature gauge sending unit.
21. Oil pressure gauge sending unit.
22. Water temperature gauge extra resistor.
23. Water temperature gauge sending unit.
24. Starting motor.
25. Voltage regulator.
26. Inspection lamp socket.
27. Foot pump for windshield washer and wiper.
28. Stop light jam switch.
29. Jam switch for indicator 51.
30. Wiper motor.
31. Three-position ventilation fan selector switch.
32. Ventilation fan motor extra resistor.
33. Two-speed ventilation fan motor.
34. Parking brake « on » warning light flasher unit.
35. Relay switch for pump 82.
36. Relay switch for high beam.
37. Relay switch for indicator 50.
38. Direction signal flasher unit.
39. Fuses.
40. Engine compartment light push switch.
41. Courtesy lights under dashboard, with switch built-in.
42. Push switches on doors for courtesy lights.
43. Outer lighting master switch.
44. Low oil pressure indicator (red).
45. Oil pressure gauge light.
46. Oil pressure gauge.
47. Oil temperature gauge.
48. Oil temperature gauge light.
49. Engine tachometer light.
50. No-charge indicator (red).
51. Choke « on » warning light (yellow).
52. Parking brake « on » indicator (red).
53. Engine tachometer.
54. Parking light indicator (green).
55. Direction signal arrow tell-tale (green).
56. High beam indicator (blue).
57. Speedometer light.
58. Fuel reserve supply warning light (red).
59. Fuel gauge light.
60. Fuel gauge.
61. Water temperature gauge light.
62. Water temperature gauge.
63. Electric clock.
64. Clock light.
65. Windshield wiper motor rheostat.
66. Windshield wiper switch.
67. Horn selector switch.
68. Electric cigar lighter, with spot light.
69. Extra switch.
70. Instrument panel light switch.
71. Dimming rheostats for instrument panel and direction signal repeater lights.
72. Glove compartment light jam switch.
73. Glove compartment light.
74. Open door warning light jam switch.
75. Open door warning lights.
76. Key-type switch for ignition, services, starting and anti-theft device.
77. Selector switch for outer lighting and light flashes.
78. Direction signal switch.
79. Horn button.
80. Luggage compartment light, with switch built-in.
81. Fuel gauge tank unit.
82. Electric fuel pump.
83. Back-up light jam switch.
84. Push switch for parking brake « on » indicator.
85. Battery.
86. Rear direction signal lights.
87. Back-up lights.
88. Tail and stop lights.
89. License plate lights.

NOTE - The symbol  means that the cable is fitted with a numbered strip or ferrule.

COLOUR CODE

Nero = Black	Azzurro = Blue	Giallo = Yellow
Grigio = Grey	Verde = Green	Rosso = Red
Bianco = White	Rosa = Pink	Marrone = Brown
	INT = Switch	